


## Multisserie - grilling whole chickens

Never mix chicken with other meat products above or below on the racks and baskets; whole chicken or pieces must be separate in a vertical row!

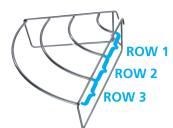

#### Whole chickens - step 1 A chicken rack has three rows to load the chicken

on. One row consists of two rings, which means that rows overlap. Loading is done from inside-out (starting with row 1), from the top to the bottom.



### Whole chickens - step 3 Place the chicken on the rack

with the lower ring between the tail and legs. The chicken "leans" backwards with its wings resting on the upper



#### Whole chickens - step 5 Create a bit of free space

between chickens, so the whole of the chicken will be browned evenly.




#### Whole chickens - step 2 Place the chicken on the

rack, cavity and legs facing down.



## Whole chickens - step 4

One chicken can be placed on row 1. Place the next two chickens on row 2 and the other two on row 3.

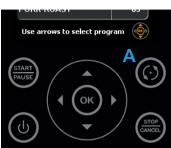

### Whole chickens - step 6

Press the rotor button (A) to move to the next column of three racks. These racks can now be loaded. Repeat this procedure until all four columns are loaded.

## Grilling other (meat) products

Never mix chicken with other meat products above or below on the racks and baskets; whole chicken or pieces must be separate in a vertical row!




#### Other products - step 1

To load the Multisserie with meat products other than whole chickens, you need meat baskets.



# Other products - step 3

Place the chicken pieces in the basket, making sure no parts stick out of the basket.

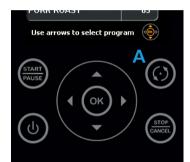

## Whole chickens - step 5

Press the rotor button (A) to move to the next column of three racks. These racks can now be loaded. Repeat this procedure until all four columns are loaded.



### Other products - step 2

To remove chicken racks or meat baskets from the Multisserie, just lift them from the inner rotor ring support (C). To hang chicken racks or meat baskets again in the Multisserie, just hook them on the inner rotor ring support (C).



## Other products - step 4

For smaller products, use a meat basket insert or aluminium tray to put the product on.



Cleaning process

Start the cleaning program after the final grilling session

## Other products - tips

You can also grill other products in the Multisserie, such as potatoes.

## Cooking

### Cooking - step 1

Push the button above the operate tab (B) to select the operator menu.



must not fall below 140°F.

### **Unloading - step 1**

Unloading the Multisserie

Note: moving the chickens from Multisserie to warmers

must be done in 20 minutes or less. The temperature

Open the door slowly and stand back to allow any steam to escape.




When the chickens are done



of the day.

### Cleaning - step 1

Push the button above the operate tab (A) to select the operator menu. Choose daily clean by using the arrows (B).

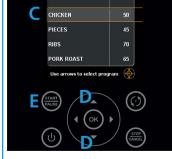


#### Cooking without preheating process - step 2

Select the chicken program or any other program (C) by using the arrows on the rotation pad (D). Press start (E) to start the program.



## Unloading - step 2

remove the products using a carving fork. Place the fork i the cavity and lift the bird up

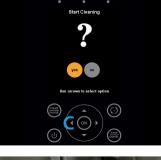


Cleaning - step 2
Press 'OK' (C) after the question "Start cleaning?". The Multisserie cools down to 149°F prior to the beginning of the cleaning cycle. The cleaning process is fully automatic and can be done overnight without operator intervention. Choose 'yes' and press 'OK' (C) again.



### Step 3

Hold the green button next to the grease container for 5 or more seconds. The unit will commence an additional skimming cycle.

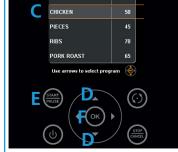

#### Cooking with pre-heating process - step 2

Select the chicken program or any other program (C) by using the arrows n the rotation pad (**D**). Press start (E). If programmed, the Multisserie will start up the pre-heating process. When pre-heating is ready, a sound signal will be given. Press OK (F) to stop this sound signal. Load the rotisserie and close the door. Press start (E) again.

#### Unloading - step 3 Put the products in GNtrays, to go directly to a merchandising warmer. Products can be put in a

dome lid container or chicken bag to give to customers.

## Deep cleaning

Important: make sure the Multisserie is cooled down.



Weekly cleaning - step 1 Change the grease filters in front of the fans every three days after running the cleaning cycle. Remove a filter by lifting it up and pulling it towards you. Clean the filters in a dishwasher or let them soak in hot grease solvent for a few hours.





Weekly cleaning - step 3 Flush all three drip channels with hot water and degreaser.



Monthly cleaning If applicable, check the anti-scale filter of the filter cartridge on saturation and duration. Replace the filter

cartridge when necessary.



Wipe away the dirt from the



Weekly cleaning - step 4 To remove any lime scale deposits from the interior, use lime scale deposit cleaner or distilled white vinegar.

# Changing the soap and rinse bottle Warning: be sure to never mix up the two types of soap and rinse hoses!



Changing soap - step 1 Open the doors in the underframe of the Multisserie (if applicable) to get access to the bottles of soap and rinse.



Changing soap - step 3 Take the complete swivel ring with hose out of the soap bottle and screw it on the lid of the new soap bottle. Put the soap bottle back in place.



Putting the bottles back in place

Put the rinse bottle back in Multisserie (if applicable). automatic cleaning process again.



Changing soap - step 2 Unscrew the swivel ring with the hose from the empty soap bottle.



**Changing rinse** Remove the hose from the rinse bottle and put it in the new rinse bottle.



place and close the doors on the underframe of the You are ready to start up the





Changing grease bag step 1

Open the doors in the underframe of the multisserie (if applicable) and pull down the handle. The spout of the grease drain disconnects from the box.



Changing grease bag step 4

Screw the cap on top of the nozzle of the greasebag. Then slide the nozzle to the wider portion of the opening in the lid and remove the grease bag from the box. NOTE: don't lift and carry the grease bag only by the nozzle. The bag may be too heavy and may tear



Changing grease bag step 7

Ensure the spout of the grease bag is locked as shown.



Changing grease bag step 2

Slide out the box and put it on a flat surface. Make sure you do not tilt the box!



apart. Changing grease bag step 5

Place the new grease bag in the box and put the cap inside the box.



Changing grease bag -

step 8 Slide the lid on the box. One side of the lid has bended corners that must slide under the top edge of the box. Slide this side on the box



Changing grease bag step 3

Slide the lid off the box.



Changing grease bag step 6

Slide the nozzle into the opening in the lid.



Changing grease bag -

step 9 Slide the box back in the underframe of the multisserie and put the handle back in the correct position, as shown. The spout of the grease drain will connect with the box.





#### During the day and after automatic cleaning

When the grease container is about 1/2 full, push the green button once (skimming process is paused for 5 minutes) and remove the grease container by sliding it out from under the container hood. Dispose contents, clean the container and place it back under the container hood.



The next morning - step 1 Unlock the cap of the strainer and remove it by simply sliding it out. After cleaning the strainer, place it back in the tank.



### The next morning - step 2

Remove the container hood from its hanging bracket. Check and clean the wiper blade. After cleaning, place the wiper blade back in its position. Hang the container hood on its bracket and slide the grease container back under the container hood.